


# THE INTEGRA<sup>®</sup> LAUNDRY PROGRAM



[www.theintegraprogram.com](http://www.theintegraprogram.com)

# INTEGRA® CVL 3-PRODUCT LAUNDRY SYSTEM

Formula Chart Carta Para Fórmulas		
Wash Formula Fórmula para Lavado	Transfer By Llavanta a	Formula Select Fórmula a Seleccionar
		F1
		F2
		F3
		F4
		F5
		F6
		F7
		F8
		F9

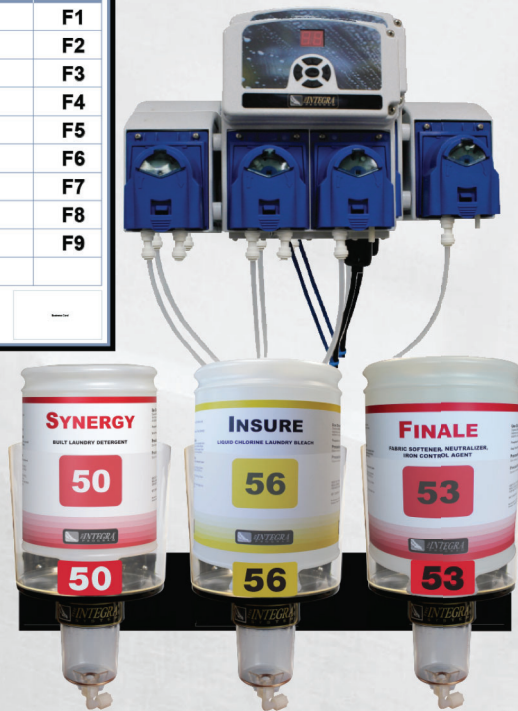

# INTEGRA® STAIN REMOVAL SYSTEM

INTEGRA® STAIN REMOVAL SYSTEM		
<b>SR ENZYME</b> Laundry Enzyme Presoak	<b>SR IRON</b> Iron Stain Remover	<b>SR RECLAIM</b> Reclaim Powder for White Linens
<b>SR 1</b> Liquid Pre-Spotter	<b>SR 2</b> Remedial Pre-Spotter	<b>SR 3</b> Enzyme Pre-Spotter



# INTEGRA® CVL 4-PRODUCT LAUNDRY SYSTEM

**Formula Chart**  
Carta Para Fórmulas

Wash Formula	Formula #	Formula Name
	F1	
	F2	
	F3	
	F4	
	F5	
	F6	
	F7	
	F8	
	F9	

**INTEGRA**  
www.theintegraprogram.com



# INTEGRA® STAIN REMOVAL SYSTEM

**INTEGRA® STAIN REMOVAL SYSTEM**

SR ENZYME Laundry Enzyme Presoak	SR IRON Iron Stain Remover	SR RECLAIM Bleach Powder for White Linens
<b>PREPARATION:</b> Dilute 1:10 in water. Use on all types of fabrics.	<b>PREPARATION:</b> Dilute 1:10 in water. Use on all types of fabrics.	<b>PREPARATION:</b> Dilute 1:10 in water. Use on all types of fabrics.
<b>TREATMENT:</b> Soak for 15-30 minutes. Rinse thoroughly.	<b>TREATMENT:</b> Soak for 15-30 minutes. Rinse thoroughly.	<b>TREATMENT:</b> Soak for 15-30 minutes. Rinse thoroughly.
<b>USE FOR:</b> All types of fabrics.	<b>USE FOR:</b> All types of fabrics.	<b>USE FOR:</b> All types of fabrics.

**SR 1 Enzyme Pre-Spatter**    **SR 2 Hematology Pre-Spatter**    **SR 3 Enzyme Pre-Spatter**

**PREPARATION:** Dilute 1:10 in water. Use on all types of fabrics.

**TREATMENT:** Soak for 15-30 minutes. Rinse thoroughly.

**USE FOR:** All types of fabrics.



# INTEGRA® CVL 5-PRODUCT LAUNDRY SYSTEM

**Formula Chart**  
Carta Para Fórmulas

Wash Formula Fórmula para Lavado	Wash No. Número de Lavado	Formula Code Código de Fórmula
		F1
		F2
		F3
		F4
		F5
		F6
		F7
		F8
		F9



# INTEGRA® STAIN REMOVAL

**INTEGRA® STAIN REMOVAL SYSTEM**

PRODUCTS	FORMULAS
<b>SR ENZYME</b> Laundry Enzyme Presoak PREPARATION: 1. Add 1/2 cup of product to 1 gallon of water. 2. Soak laundry for 15-30 minutes. 3. Wash as normal. PREVENTION: 1. Wash laundry immediately. 2. Do not let laundry sit in water for more than 24 hours. 3. Do not use bleach on colored fabrics. TREATMENT: 1. Soak laundry in solution for 15-30 minutes. 2. Wash as normal. 3. Repeat if necessary. USE FOR: Whites, Colors, Delicates. PRODUCT: SR ENZYME	<b>SR IRON</b> Iron Stain Remover PREPARATION: 1. Add 1/2 cup of product to 1 gallon of water. 2. Soak laundry for 15-30 minutes. 3. Wash as normal. PREVENTION: 1. Wash laundry immediately. 2. Do not let laundry sit in water for more than 24 hours. 3. Do not use bleach on colored fabrics. TREATMENT: 1. Soak laundry in solution for 15-30 minutes. 2. Wash as normal. 3. Repeat if necessary. USE FOR: Whites, Colors, Delicates. PRODUCT: SR IRON
<b>SR 1</b> Liquid Pre-Spotter PREPARATION: 1. Add 1/2 cup of product to 1 gallon of water. 2. Soak laundry for 15-30 minutes. 3. Wash as normal. PREVENTION: 1. Wash laundry immediately. 2. Do not let laundry sit in water for more than 24 hours. 3. Do not use bleach on colored fabrics. TREATMENT: 1. Soak laundry in solution for 15-30 minutes. 2. Wash as normal. 3. Repeat if necessary. USE FOR: Whites, Colors, Delicates. PRODUCT: SR 1	<b>SR 2</b> Removal Pre-Spotter PREPARATION: 1. Add 1/2 cup of product to 1 gallon of water. 2. Soak laundry for 15-30 minutes. 3. Wash as normal. PREVENTION: 1. Wash laundry immediately. 2. Do not let laundry sit in water for more than 24 hours. 3. Do not use bleach on colored fabrics. TREATMENT: 1. Soak laundry in solution for 15-30 minutes. 2. Wash as normal. 3. Repeat if necessary. USE FOR: Whites, Colors, Delicates. PRODUCT: SR 2
	<b>SR 3</b> Enzyme Pre-Spotter PREPARATION: 1. Add 1/2 cup of product to 1 gallon of water. 2. Soak laundry for 15-30 minutes. 3. Wash as normal. PREVENTION: 1. Wash laundry immediately. 2. Do not let laundry sit in water for more than 24 hours. 3. Do not use bleach on colored fabrics. TREATMENT: 1. Soak laundry in solution for 15-30 minutes. 2. Wash as normal. 3. Repeat if necessary. USE FOR: Whites, Colors, Delicates. PRODUCT: SR 3



# PRELUDE

## LAUNDRY BREAK

- \* HIGH ALKALINE FORMULA
- \* BREAKS DOWN HEAVY SOILS

Usage amount ... 1.5 – 3 ozs per load for 50# Machine



[WWW.THEINTEGRAPROGRAM.COM](http://WWW.THEINTEGRAPROGRAM.COM)

# PLUS 15

## HD LAUNDRY DETERGENT

- \* CONCENTRATED DETERGENT
- \* FLEXIBLE FORMULA
- \* REMOVES HEAVY SOILS

Usage amount ... 1 – 2 ozs per load for 50# Machine



[www.theintegraprogram.com](http://www.theintegraprogram.com)

# SYNERGY

## BUILT LAUNDRY DETERGENT

- \* ELIMINATES THE NEED FOR A BREAK
- \* WATER CONDITIONERS
- \* FREE RINSING

Usage amount ... 2 – 4 ozs per load for 50# Machine



[www.THEINTEGRAPROGRAM.COM](http://www.THEINTEGRAPROGRAM.COM)

# INSURE

## LIQUID CHLORINE LAUNDRY BLEACH

- \* INSTITUTIONAL STRENGTH
- \* SAFE, CONVENIENT LIQ DISPENSING

Usage amount ... 2 – 3 ozs per load for 50# Machine



[WWW.THEINTEGRAPROGRAM.COM](http://WWW.THEINTEGRAPROGRAM.COM)



# FINALE

## FABRIC SOFTENER, NEUTRALIZER, IRON CONTROL AGENT

- \* CONTROLS pH
- \* IRON CONTROL
- \* SOFTENS FABRICS
- ELIMINATES STATIC

• Usage amount ... 0.5 – 1 ozs per load for 50# Machine



[WWW.THEINTEGRAPROGRAM.COM](http://WWW.THEINTEGRAPROGRAM.COM)

# NEUTRA

## IRON REMOVING SOUR

- \* INSTITUTIONAL STRENGTH
- \* pH NEUTRALIZER
- CONTROLS IRON

Usage amount ... 1.5 ozs per load for 50# Machine



[WWW.THEINTEGRAPROGRAM.COM](http://WWW.THEINTEGRAPROGRAM.COM)

# FLUFF

## CONCENTRATED FABRIC SOFTENER

- \* PROVIDES STATIC FREE LINEN
- \* PLEASANTLY SCENTED
- \* SAFE ON MOST FABRICS

Usage amount ... 0.5 – 0.75 ozs per load for 50# Machine



[WWW.THEINTEGRAPROGRAM.COM](http://WWW.THEINTEGRAPROGRAM.COM)

# INTEGRA® STAIN REMOVAL SYSTEM

The **INTEGRA® SR SYSTEM** is a complete set of spotters that complements the **INTEGRA® Laundry Program**. This versatile system will treat a variety of stains. **SR SYSTEM** products are packaged ready-to-use. No mixing required.

- Products are color and number coded.
- A wall chart is provided for proper training and use of each product.
- A cost effective way to treat stained linen.



www.THEINTEGRAPROGRAM.COM

# SR 1

## LIQUID PRE-SPOTTERS

### MAKE-UP/MEDICINAL LIQUID PRE-SPOTTERS

#### FEATURES:

- \* POWERFUL SOLVENT BLEND
- \* TREATS MAKE-UP/MEDICINAL STAINS
- \* READY-TO-USE FORMULA

**USED FOR:** Make-up, Soda, Medicines, Dirt, Coffee, Supplements/Minerals

Apply product directly on stain



[WWW.THEINTEGRAPROGRAM.COM](http://WWW.THEINTEGRAPROGRAM.COM)

# SR 2

## GREASE CUTTING LIQUID PRE-SPOTTER

### FEATURES:

- \* GREASE CUTTING SURFACTANT BLEND
- \* TREATS GREASY SOILS
- \* READY-TO-USE FORMULA

**USED FOR:** Grease Soils, Suntan Lotions, Mascara,  
Shirt Collars, Food Soils

Apply product directly on stain



[WWW.THEINTEGRAPROGRAM.COM](http://WWW.THEINTEGRAPROGRAM.COM)

# SR 3

## ENZYME PRE-SPOTTERS

### SR FEATURES:

- \* READY-TO-USE
- \* ENZYME SOLVENT BLEND
- \* READY-TO-USE FORMULA
- \* TREATS PROTEIN BASED SOILS

**USED FOR:** Blood, Grass Stains, Ketchup/Mustard, Red Wine, Food Soils

Apply product directly on stain



[WWW.THEINTEGRAPROGRAM.COM](http://WWW.THEINTEGRAPROGRAM.COM)

# SR ENZYME

## LAUNDRY ENZYME PRESOAK

- \* REMOVES ORGANIC STAINS
- \* COLOR SAFE
- \* ENZYME ACTIVATED

Product is ready-to-use



[WWW.THEINTEGRAPROGRAM.COM](http://WWW.THEINTEGRAPROGRAM.COM)



# SR IRON

## IRON STAIN REMOVER

- \* RUST INHIBITORS
- \* INSTITUTIONAL STRENGTH
- \* RAPID SOLUBILITY

Product is ready-to-use



[WWW.THEINTEGRAPROGRAM.COM](http://WWW.THEINTEGRAPROGRAM.COM)

# SR RECLAIM

## RECLAIM POWDER FOR WHITE LINEN

- \* PENETRATES FABRICS & LIFTS SOILS
- \* BRIGHTENS / WHITENS LINEN
- \* ELIMINATES GRAYING

Product is ready-to-use



[WWW.THEINTEGRAPROGRAM.COM](http://WWW.THEINTEGRAPROGRAM.COM)

# INTEGRA® SPECIALTY LAUNDRY PRODUCTS



[WWW.THEINTEGRAPROGRAM.COM](http://WWW.THEINTEGRAPROGRAM.COM)

# PROPEL

## OXYGEN BLEACH

- \* COLOR SAFE
- \* BRIGHTENS / WHITENS LINEN
- \* ELIMINATES STAINS

Usage amount ... 1.5 – 3 ozs per load for 50# Machine



[WWW.THEINTEGRAPROGRAM.COM](http://WWW.THEINTEGRAPROGRAM.COM)

# LAUNDRY SAN

## LAUNDRY SANITIZER

- \* QUAT BASED SANITIZER
- \* REDUCES BACTERIAL COUNTS BY 99.9%
- \* SAFE FOR COLORED TEXTILES
- \* DEODORIZER

Usage amount for washing ... 12 ozs per 100#dry laundry  
For sanitizing ... 1 oz/gal water to yield 780 ppm active quat



[WWW.THEINTEGRAPROGRAM.COM](http://WWW.THEINTEGRAPROGRAM.COM)

# TOP LOADER

## LIQUID LAUNDRY DETERGENT

- \* HOMESTYLE MACHINE DETERGENT
- \* CONCENTRATED STRENGTH
- \* CONTAINS WATER CONDITIONERS
- \* USE IN ALL TEMPERATURES
- \* LOW USE COST

Usage amount ... 1 - 2 ozs per load



# HARMONY

## DETERGENT WITH OXYGEN BLEACH

- \* HOMESTYLE MACHINE DETERGENT
- \* NON PHOSPHATE
- \* GREEN CHEMISTRY
- \* COMBINATION PRODUCT

Usage amount ... 2 - 3 ozs per load



# DAZZLE

## DETERGENT WITH ODOR ELIMINATOR

- \* CONTAINS ODOR ELIMINATOR
- \* CONTAINS WATER CONDITIONERS
- \* FLEXIBLE FORMULA
- \* INDUSTRIAL STRENGTH

General usage... 1.5 - 3.0 oz. per 50# machine





# TURNOUT

## LAUNDRY DETERGENT FOR PROTECTIVE APPAREL

- \* pH of 9.5
- \* FLEXIBLE FORMULA
- \* STRENGTH

General usage... 1.5 - 3.0 oz. per 50# machine



[WWW.THEINTEGRAPROGRAM.COM](http://WWW.THEINTEGRAPROGRAM.COM)

# FRESH LINEN

## FABRIC SOFTENER

- \* CONCENTRATED FORMULA
- \* LONG LASTING FRESH SCENT
- \* EASY IRONING

Recommended usage... 1.0 – 1.5 oz. per 50# machine



[WWW.THEINTEGRAPROGRAM.COM](http://WWW.THEINTEGRAPROGRAM.COM)

## LAUNDRY FORMULAS

WHITE TOWELS	TIME		TEMPERATURE		WATER LEVEL	COMMENTS
Flush*	2 min.		Split		High	* Can be eliminated for light soil
Drain	1 min.					
Wash	8 min.		Hot		Low	Prelude, Plus 15
Drain	1 min.					
Bleach*	7 min.		Hot		Low	Insure * Can be combined with wash
Drain	1 min.					bath for light soil
Rinse	2 min.		Hot		High	
Drain	1 min.					
Rinse*	2 min.		Split		High	*Intermediate extract for 30 sec. can
Drain	1 min.					be used in place of this rinse
Rinse	2 min.		Split		High	
Drain	1 min.					
Sour/Soft	4 min		Split		Low	Finale or Neutra & Fluff
Extract	6 min.*					* Can vary depending on machine
* See Test Kit for chemical amounts						



## LAUNDRY FORMULAS

TOWELS COLORED	TIME	TEMPERATURE	WATER LEVEL	COMMENTS
<b>Flush*</b>	2 min.	Split	High	* Can be eliminated for light soil
<b>Drain</b>	1 min.			
<b>Wash</b>	8 min.	Hot	Low	Prelude, Plus 15
<b>Drain</b>	1 min			
<b>Rinse</b>	2 min.	Split	High	
<b>Drain</b>	1 min.			
<b>Rinse*</b>	2 min.	Split	High	* Intermediate extract for 30 sec. can be used in place of this rinse
<b>Drain</b>	1 min.			
<b>Rinse</b>	2 min.	Split	High	
<b>Drain</b>	1 min.			
<b>Sour/Soft</b>	4 min.	Split	Low	Finale or Neutra & Fluff
<b>Extract*</b>	6 min			* Can vary depending on machine
* See Test Kit for chemical amounts				

## LAUNDRY FORMULAS

WHITE SHEETS	TIME	TEMPERATURE	WATER LEVEL	COMMENTS
<b>Flush*</b>	2 min.	Split	High	* Can be eliminated in light soil
<b>Drain</b>	1 min.			
<b>Wash</b>	7 min.	Hot	Low	Prelude, Plus 15
<b>Drain</b>	1 min.			
<b>Bleach*</b>	7 min.	Hot	Low	Insure* Can be combined with wash
<b>Drain</b>	1 min.			bath for light soil
<b>Rinse</b>	2 min.	Hot	High	
<b>Drain</b>	1 min.			
<b>Rinse*</b>	2 min.	Split	High	* Intermediate extract can
<b>Drain</b>	1 min.			be used in place of this rinse
<b>Rinse</b>	2 min.	Split	High	
<b>Drain</b>	1 min.			
<b>Sour/Soft</b>	4 min.	Split	Low	Finale or Neutra & Fluff
<b>Extract*</b>	5 min			* Can vary depending on machine
* See Test Kit for chemical amounts				

## LAUNDRY FORMULAS

SHEETS COLORED		TIME	TEMPERATURE	WATER LEVEL	COMMENTS
		2 min	Split	High	* Can be eliminated for light soil
		1 min			
		8 min.	Hot	Low	Prelude, Plus 15
		1 min			
		2 min.	Split	High	
		1 min.			
		2 min.	Split	High	* Intermediate extract for 30 sec. can be used in place of this rinse
		1 min.			
		2 min.	Split	High	
		1 min.			
		4 min.	Split	Low	Finale or Neutra & Fluff
		5 min			* Can vary depending on machine
* See Test Kit for chemical amounts					



## LAUNDRY FORMULAS

RAGS & MOPS	TIME	TEMPERATURE	WATER LEVEL	COMMENTS
<b>Flush</b>	2 min.		High	
<b>Drain</b>	1 min.			
<b>Flush</b>	2 min.	Hot	High	
<b>Drain</b>	1 min.			
<b>Wash</b>	8 min.	Hot	Low	Prelude, Plus 15
<b>Drain</b>	1 min.			
<b>Bleach</b>	6 min	Hot	Low	Insure* Can be combined with wash bath
<b>Drain</b>	1 min.			
<b>Rinse</b>	2 min.	Hot	High	
<b>Drain</b>	1 min.			
<b>Rinse*</b>	2 min.	Split	High	* Intermediate extract can
<b>Drain</b>	1 min.			be used in place of this rinse
<b>Rinse</b>	2 min.	Split	High	
<b>Drain</b>	1 min			
<b>Extract</b>	6 min.			* Can vary depending on machine
* See Test Kit for chemical amounts				

# LAUNDRY FORMULAS

BEDSPREADS		TIME		TEMPERATURE		WATER LEVEL	COMMENTS
<b>Wash</b>		6 min		Split		Low	Prelude, Plus 15
<b>Drain</b>		1 min					
<b>Rinse</b>		2 min.		Split		High	
<b>Drain</b>		1 min					
<b>Rinse</b>		2 min.		Split		High	
<b>Drain</b>		1 min.					
<b>Rinse</b>		2 min.		Split		High	
<b>Drain</b>		1 min.					
<b>Drain</b>		1 min.					
<b>Drain</b>		1 min.					
<b>Soft</b>		4 min.		Split		Low	Finale or Fluff
<b>Extract*</b>		6 min					* Can vary depending on machine
<b>* See Test Kit for chemical amounts</b>							





## LAUNDRY FORMULAS

PADS		TIME		TEMPERATURE		WATER LEVEL	COMMENTS
Flush		2 min.		Split		High	
Drain		1 min.					
Flush		2 min.		Split		High	
Drain		1 min.					
Wash		8 min.		Hot		Low	Prelude, Plus 15 or Zyme Plus
Drain		1 min.					
Bleach		8 min.		Hot		Low	Insure
Drain		1 min.					
Rinse		2 min.		Hot		High	
Drain		1 min.					
Rinse		2 min.		Split		High	
Drain		1 min.					
Rinse		2 min.		Split		High	
Drain		1 min.					
Sour		4 min.		Split		Low	Neutra
Extract		6 min.*					* Can vary depending on machine
* See Test Kit for chemical amounts							



## LAUNDRY FORMULAS

BANQUET LINEN WHITE	TIME	TEMPERATURE	WATER LEVEL	COMMENTS
Flush	2 min.	Split	High	
Drain	1 min.			
Flush	2 min.	Hot	High	
Drain	1 min.			
Wash	8 min.	Hot	Low	Prelude, Plus 15 or Accent
Drain	1 min.			
Bleach	8 min.	Hot	Low	Insure
Drain	1 min.			
Rinse	2 min.	Hot	High	
Drain	1 min.			
Rinse	2 min.	Split	High	
Drain	1 min.			
Rinse	2 min.	Split	High	
Drain	1 min.			
Sour	4 min.	Split	Low	Neutra
Extract	5 min.*			* Can vary depending on machine
* See Test Kit for chemical amounts				



# LAUNDRY FORMULAS

BANQUET LINEN COLORED	TIME		TEMPERATURE		WATER LEVEL	COMMENTS
Flush	2 min.		Split		High	
Drain	1 min.					
Flush	2 min.		Hot		High	
Drain	1 min.					
Wash	8 min.		Hot		Low	Prelude, Plus 15 or Accent
Drain	1 min.					
Rinse	2 min.		Hot		High	
Drain	1 min.					
Rinse	2 min.		Split		High	
Drain	1 min.					
Rinse	2 min.		Split		High	
Drain	1 min.					
Sour	4 min.		Split		Low	Neutra
Extract	5 min.*					* Can vary depending on machine
* See Test Kit for chemical amounts						



## LAUNDRY FORMULAS

RECLAIM WHITES	TIME	TEMPERATURE	WATER LEVEL	COMMENTS
Wash	30 min.	Hot	Low	Add SR Reclaim
Drain	1 min.			
Wash	8 min.	Hot	Low	Plus 15
Drain	1 min.			
Rinse	2 min.	Hot	High	
Drain	1 min.			
Rinse*	2 min.	Split	High	*Intermediate extract for 30 sec. can be used in place of this rinse
Drain	1 min.			
Rinse	2 min.	Split	High	
Drain	1 min.			
Sour/Soft	4 min.	split	Low	Finale or Neutra & Fluff
Extract	6 min.*			* Can vary depending on machine
* See Test Kit for chemical amounts				



## LAUNDRY FORMULAS

RECLAIM COLORED	TIME	TEMPERATURE	WATER LEVEL	COMMENTS
Wash	60 min.	Hot	Low	Add SR Enzyme
Drain	1 min.			
Wash	15 min.	Hot	Low	
Drain	1 min.			
Rinse	2 min.	Hot	High	
Drain	1 min.			
Rinse*	2 min.	Split	High	*Intermediate extract for 30 sec. can be used in place of this rinse
Drain	1 min.			
Rinse	2 min.	Split	High	
Drain	1 min.			
Sour/Soft	4 min.	split	Low	
Extract	6 min.*			* Can vary depending on machine
* See Test Kit for chemical amounts				



## LAUNDRY FORMULAS

SR IRON		TIME		TEMPERATURE		WATER LEVEL	COMMENTS
Wash		30 min.		Hot		Low	Add SR Iron
Drain		1 min.					
Wash		8 min.		Hot		Low	Plus 15
Drain		1 min.					
Rinse		2 min.		Hot		High	
Drain		1 min					
Rinse*		2 min.		Split		High	*Intermediate extract for 30 sec. can
Drain		1 min.					be used in place of this rinse
Rinse		2 min.		Split		High	
Drain		1 min.					
Sour/Soft		4 min		split		Low	Finale or Neutra & Fluff
Extract		6 min.*					* Can vary depending on machine
* See Test Kit for chemical amounts							

